

**FIG. K-16—TRANSFER CASE  
SHIFT LEVER CONTROL**

- 1—Shift Lever Knob
- 2—Lock Nut (Special)
- 3—Shift Lever
- 4—Dust Cover
- 5—Cap Screw
- 6—Lockwasher
- 7—Fulcrum Ball Retainer and Pin
- 8—Shim
- 9—Lock Screw
- 10—Shift Rod (Front Wheels)
- 11—Clevis Pin
- 12—Cotter Pin
- 13—Shift Rod Link
- 14—Support Tube
- 15—Shift Rod (Range)
- 16—Shift Rod Bearing
- 17—Clip
- 18—Shift Lever Torsion Spring
- 19—Anti-Rattle Spring
- 20—Shift Rod Pawl
- 21—Shift Fork Lock Screw
- 22—Gasket (Control Case)
- 23—Cover
- 24—Bolt
- 25—Lockwasher
- 26—Torsion Spring Retainer Rod
- 27—Shift Lever Control Case

